




Optional Accessories Installation Instructions – Backrest Assembly



Please read this manual carefully before use and keep it properly for future reference.

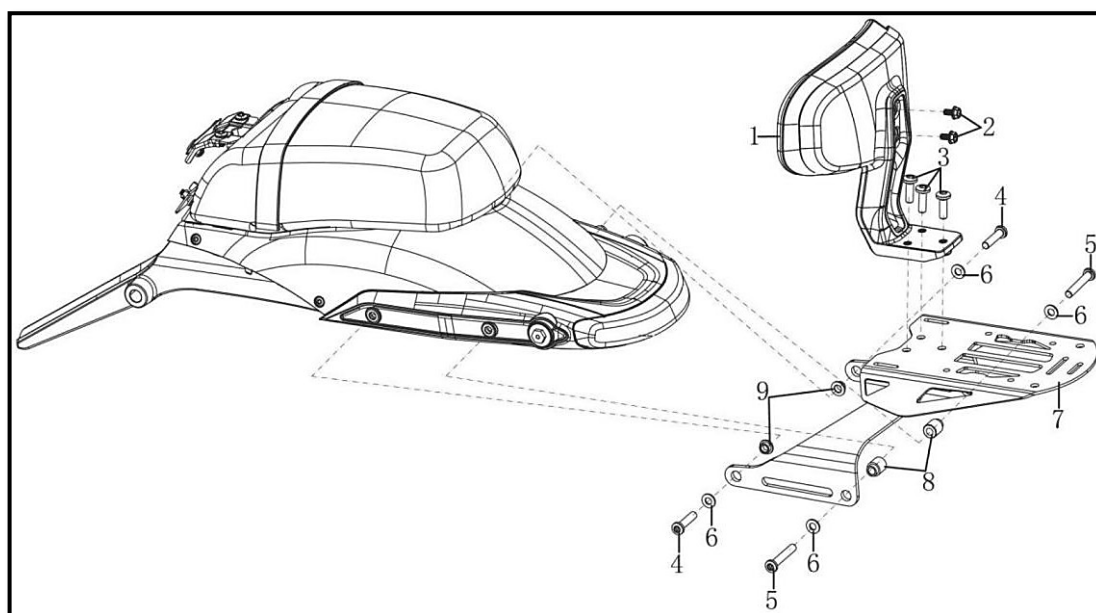


No.	Fig. No.	Title/Description	Qty
1	510010-P16A-0000	REAR BACKREST SUPPORT	1
2	920000-06012-208	HEX FLANGE BOLT GB/T5789 M6*12	2
3	510018-P15A-0000	HEX SOCKET HEAD BOLT M8*25	3
4	801202-P16B-0000	HEX SOCKET HEAD BOLT M8*35	2
5	801201-P16B-0000	HEX SOCKET HEAD BOLT M8*50	2
6	601103-P55A-0000	WASHER $\phi 8 \times \phi 16 \times 1.5$	4
7	812200-P16A-0012	TAIL BOX BRACKET	1
8	812204-P16A-0001	RR BUSHING, TAIL BOX	2
9	812203-P16A-0001	FRONT BUSHING, TAIL BOX	2

Installation Instructions >> Backrest Assembly


1. Secure the Rear Backrest Support [B] together using two Hexagon Flange Bolts GB/T5789 M6×12 [A];




2. Secure the Rear Backrest Support [B] to the Tail Box Bracket [D] using three Hexagon Socket Pan Head Bolts M8×25 [C];

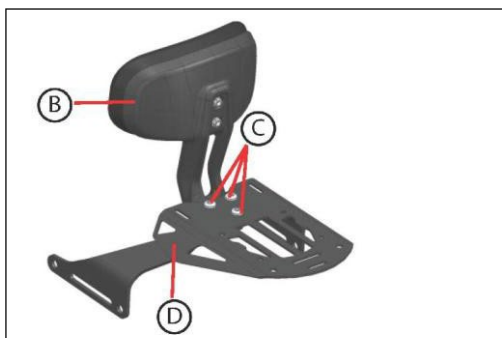

3. Mount the Small Washer $\phi 8 \times \phi 16 \times 1.5$ [F], Tail Box Bracket [D], and Front Bushing, Tail Box [G] onto the left side of the rear mudguard [H] using one Hexagon Socket Pan Head Bolt M8×35 [E];

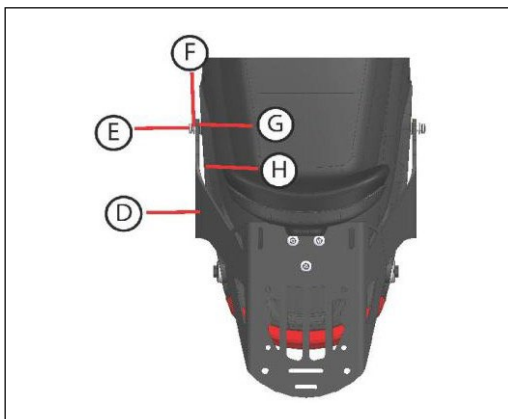


4. Mount the Small Washer $\phi 8 \times \phi 16 \times 1.5$ [F], Tail Box Bracket [D], and Rear Bushing, Tail Box [J] onto the left side of the rear mudguard [H] using one Hexagon Socket Pan Head Bolt M8×50 [I]; (Repeat the same procedure for the right side).

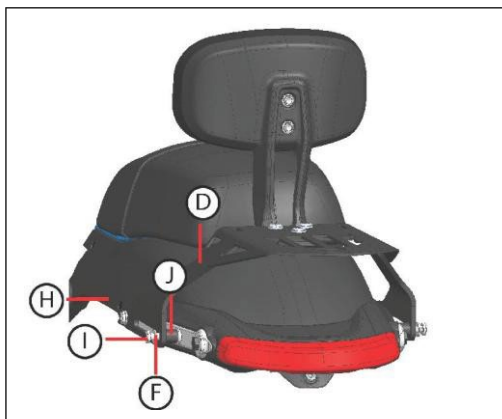



Parts List & Recommended Tools

No.	Title/Name	Qty	No.	Title/Name	Qty
1	6mm Hex Key	1	5	Hexagon Socket Pan Head Bolt M8×25	3
2	5mm Hex Key	1	6	Hexagon Socket Pan Head Screw M8×35	2
3	Hexagon Flange Bolt GB/T5789 M6×12	2	7	Hexagon Socket Pan Head Screw M8×50	2
4	Small Washer $\phi 8 \times \phi 16 \times 1.5$	4			

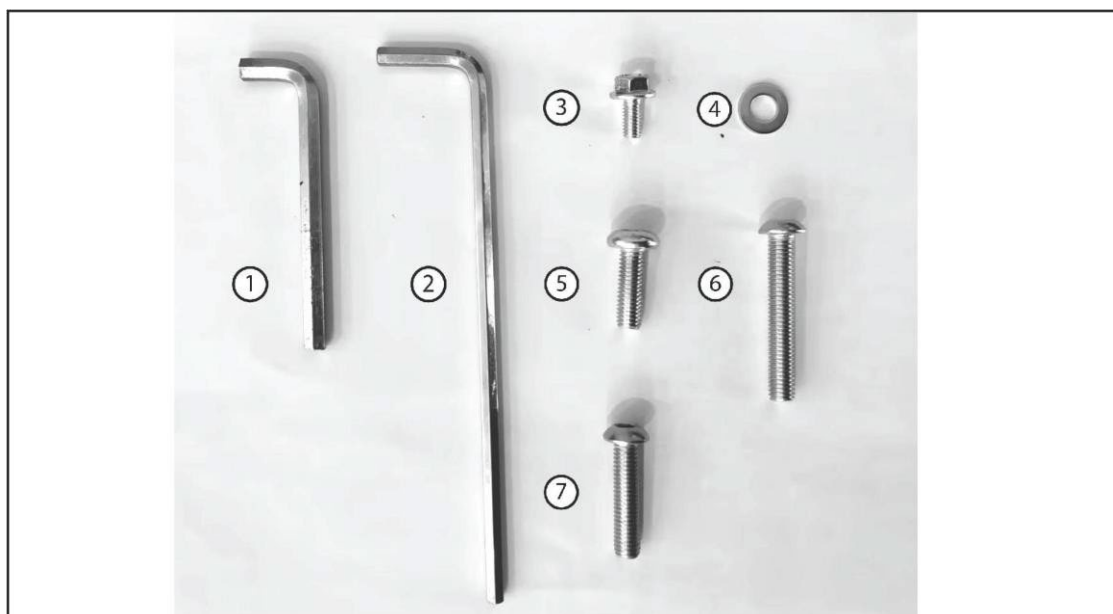

Bolt Torque Standard (N/m)

Bolt Diameter (mm)	S-Dimension (mm)	Grade 4.6	Grade 5.6	Grade 6.6	Grade 8.8	Grade 10.9	Grade 12.9
M6	10	4~5	5~7	6~8	9~12	13~14	15~20
M8	13	10~12	12~15	14~18	22~29	29~35	37~50
M10	17	20~25	25~31	29~39	44~58	64~76	74~88
M12	19	35~44	44~54	49~64	76~102	108~127	128~171
M14	22	54~69	69~88	83~98	121~162	176~206	204~273
M16	24	88~108	108~137	127~157	189~252	274~323	319~425
M18	27	118~147	147~186	176~216	260~347	372~441	489~565
M20	30	167~206	206~265	245~314	369~492	529~637	622~830
M22	32	225~284	284~343	343~431	502~669	725~862	847~1129
M24	36	294~370	370~441	441~539	638~850	921~1098	1096~1435
M27	41	441~519	539~686	637~784	933~1244	1372~1617	1574~2099
M30	46	529~666	666~833	784~980	1267~1689	1666~1960	2138~2850
M36	55	882~1078	1098~1372	1323~1677	2214~2952	2744~3283	3736~4981
M42	65	1372~1666	1705~2736	1960~2548	3540~4721	4263~5096	5974~7966
M48	75	2058~2450	2334~2548	3087~3822	5311~7081	6468~7742	8962~11949

IMPORTANT NOTICE: MOTO MORINI recommends that customers have their products installed by a licensed and experienced motorcycle mechanic. MOTO MORINI shall not be held liable for any accidents, injuries, deaths, losses, or other claims related to or resulting from the use of its products. Under no circumstances shall MOTO MORINI be responsible for any incidental or consequential damages associated with the use of its products or any of their components.